

ELECTROMAX

FOOD CHOPPER



USER MANUAL



Better Appliances, Better Home



ELECTROMAX



European Design & Technology By Electromax International UK



www.electromax.pk



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

ELECTROMAX


Importance:

- ⊙ Please read this manual carefully before using this appliance, and keep the instructions for future reference
- ⊙ Before using this appliance, please check the local voltage(V) and be sure the rated V of this appliance is in compliance with the local voltage. To avoid possible danger, do NOT connect this appliance to any timer
- ⊙ Please do NOT use this appliance if there is any damage of the power cord, plug or any other parts of the appliance
- ⊙ In case of any damage of the power cord, it should be replaced by the manufacturer, the specified maintenance center, or equivalent professionals.
- ⊙ Please keep this appliance beyond children's reach.
- ⊙ Kids are not allowed to use this appliance without supervision of adult.
- ⊙ Never leave this appliance be in unattended operation.
- ⊙ Always switch off the power of this appliance by turning the control knob to the position "0".
- ⊙ Switch off the power of this appliance before you take off any accessories.
- ⊙ Take off the plug of this appliance from power socket right after you stop using the appliance.
- ⊙ Never immerge the main body(motor inside) into water or any other liquid. Don't flush the main body.
- ⊙ When the appliance is working, do NOT use finger or any tool(such as a knife) other than the pusher of this appliance to push the ingredients into the funnel.
- ⊙ The blade is very sharp. Please do be careful when you take off, clean or fix the blade.
- ⊙ Always turn off the power of this appliance before you put finger or any other tool into the processing cup.
- ⊙ Only after all the parts stop running, can you take off the cover of the cup.
- ⊙ Never use parts or accessories from other manufacturers, or those NOT specially recommended by our company.
- ⊙ Don't exceed the Max. capacity specified on the cup.
- ⊙ Please check this manual for appropriate processing time.
- ⊙ If a process is not finished in the rated time, please turn off the power to cool the appliance for 2 minutes before next processing. And in case of processing of more than 5 lots, it needs to cool the appliance for 10 minutes before the next processing. This will help extend the lifetime of the appliance.
- ⊙ Before using this appliance for the first time, please give a good scrub to all those parts which directly contact the ingredients.
- ⊙ The max. continuous operation time 1 min and min. rest time 2 min.

ELECTROMAX

Fix or detach the appliances

1. Fix the main transmission shaft to the main body.
2. Put the processing cup onto the main body, and turn it 30 degree clockwise until it connects the main body tightly.
3. Put the second transmission shaft onto the main transmission shaft.
4. Put the cover onto the processing cup, and turn it 30 degree clockwise until it connects the processing cup tightly.
5. Carefully clean mill cutter with a brush. Do not use water.

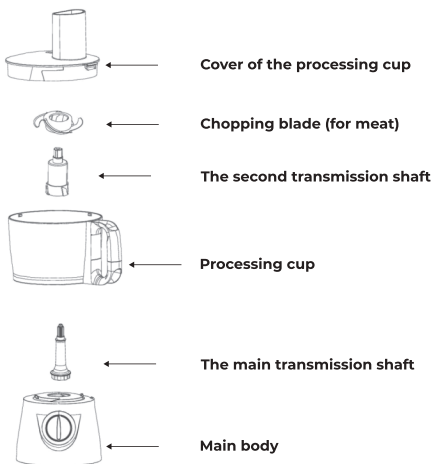

The speed positions

Position "1", "2" and "pulse"

Position "1" for chopping/blending fruit or vegetables with less fibre, eggs, dough, etc.

Position "2" for chopping/blending fruit or vegetables with much fibre, meat, etc.

Position "P" for instant chopping/blending, or to relieve the choked blade.

ELECTROMAX


Blending blade

Put the blade in the right position of the cup before feeding the ingredients.

Tip and warning

The standard processing time for blending is between 30-60 seconds.

The "I"(slow speed) is recommended for blending (hard ingredients to powder).

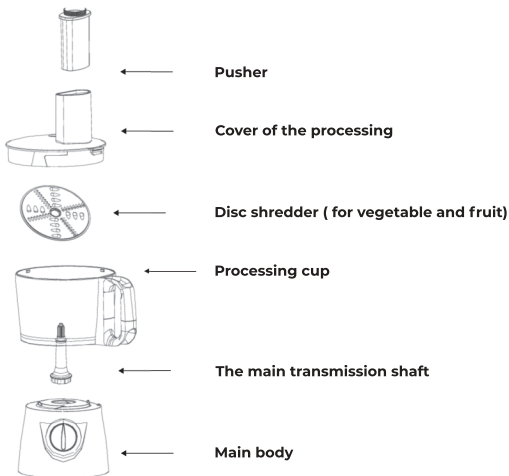

1. Fix the main transmission shaft to the main body
2. Put the processing cup onto the main body, and turn it 30 degree clockwise until it connects the main body tightly.
3. Put the blade onto the main transmission shaft.
4. Put the cover onto the processing cup, and turn it 30 degree clockwise until it connects the processing cup tightly.
5. (1) Connect power to the main body, and turn the switch knob to the correct position. (2) Put the vegetables or fruit into the funnel, and use the pusher to push them into the processing cup.

ELECTROMAX

Specifications

Voltage	220-240V
Power	500W

The pusher

When pushing the ingredients into the funnel, do NOT press too much to the pusher. If the ingredients is too big to be put into the funnel, it needs to be cut into small pieces for the entry.

Trouble Shooting

PROBLEMS	SOLUTIONS
The appliance does not start	Check and be sure all the assembling processes are done correctly as per the instructions
The appliance stops suddenly	The cover of processing cup may become loose from the cup. Turn the cover clockwise to connect the cup tightly, the appliance will start again.
The motor works, but the processing parts do not work	Check and be sure the transmission shaft is correctly mounted. (Please take the instructions for reference)

How to clean

1. Operate with 1/2 of lukewarm water right after being used. Then wash inside with a soft sponge.
2. To remove ingredients stuck in the blade, carefully clean it with a brush. Then, dry.
3. Blades should be handled carefully.
4. Wipe motor housing with a damp cloth.
5. Wash each part in cold water or lukewarm water with a soft sponge.
6. Rinse and dry thoroughly.
7. Carefully clean mill cutter with a brush. Do not use water.