



ELECTROMAX



European Design & Technology By Electromax International UK



www.electromax.pk



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

ELECTROMAX

DRY IRON



USER MANUAL



Better Appliances, Better Home

Important safety precautions

1. This Iron is recommended for household use only.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. Do not damage the supply cord or the plug.
5. Clean the plug regularly.
6. The Iron should always be turned to MIN before plugging or unplugging from outlet. Insert the plug firmly.
7. To avoid a risk of electric shock, do not put the Iron in water or any other liquid. Do not plug or unplug with wet hands.
8. Before plugging, make sure that the input voltage is the same as the rated voltage marked on the Iron.
9. The Iron must not be left unattended while it is connected to the supply mains. When leaving the room even for a short time, disconnect the plug and put it on upright position. Keep the Iron away from small children.
10. The Iron must be used and rested on a flat, stable surface.
11. When placing the Iron on its stand, ensure that the surface on which the stand is placed is stable.
12. The Iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
13. Do not operate the Iron with a damaged cord or the Iron has been damaged or the main socket is loose.
14. Stop using the product when any abnormality or failure occurs and disconnect the plug.
15. Never disassemble, repair or modify this Iron. For any repair work, request at an authorized service shop.
16. Never pull the cord directly to disconnect from outlet; instead grasp the plug firmly and pull to disconnect.
17. Do not use the Iron with the supply cord in tangled condition. The supply cord might be damaged soon.
18. Let the Iron cool completely, before storing it. Loop cord loosely around the Iron and put it on upright position when storing.
19. To avoid burning, never touch the hot metal parts of the Iron.

ELECTROMAX

How to use

1. Put the Iron on upright position.
2. Set the Temperature Select Control dial to the MIN position.
3. Connect the plug into the outlet.
4. Set the Temperature Select Control dial to the desired position which is suitable to the type of fabric. Wait for approximately 2 minutes until the Iron gets hot.

Selection of temperature

- ⊙ Sort the clothes according to the group of fabrics indicated on the Temperature Select Control.
- ⊙ Check the label attached to the clothes and follow the manufacturer's instructions.
- ⊙ First, iron the clothes which require the lowest temperature. After that, iron those that require higher temperatures. This is because it takes more time for the Iron to get cool than to get hot.
- ⊙ To avoid scorching or spoiling the cloth, pay attention to the fabric composition of the clothes.
- ⊙ In blended yarn fabrics, select the temperature suitable to the fabric resistant to the lowest temperature.
- ⊙ In case the fabric composition of the clothes is unknown, make trial ironing at a least conspicuous part of the clothes before regular ironing.
- ⊙ Try at lower temperature, and then gradually increase the temperature to find an ideal temperature for the material.

Caution

- ⊙ Avoid ironing on something hard such as zipper, metallic button and such in order not to damage the surface of the Soleplate.
- ⊙ Do not use any abrasive material.

Maintenance

- ⊙ After ironing, cool the Iron and then wipe it with a piece of soft cloth.
- ⊙ For any obstinate dirt, use a piece of soft cloth soaked with water, soap or neutral detergent.

ELECTROMAX

Attention  The clothing can't be ironed if it bears this mark.		
Ironing mark	Material classification	Temperature-setting
	Artificial fibre Raylon Nylon	Minimum temperature
	Silk & silk fabric wool	
	Cotton jute	Maximum temperature

Troubleshooting

Please refer to the table below for common queries on this unit as it may save you time and money. If your concern is not found on the list or your issue persists, then kindly call our service centre.


PROBLEMS	CAUSES	SOLUTIONS
Iron does not turn on	The iron is not plugged in	Check to be sure if appliance is plugged into a working outlet
Iron produced insufficient heat	Iron is connected in a low line voltage	Check the correct voltage and outlet as stated in the instructions manual
	Incorrect thermostat setting	Adjust or set the desired thermostat setting according to the type of garment
The iron sticks to the garment	The garment might not be rinsed properly	Make sure the garments are thoroughly washed and over-dry before ironing
	The garment was sprayed with a liquid other than tap water	Make sure to use water only to avoid any stains
	Iron too hot for fabric being ironed	Adjust or lower the thermostat setting
Soleplate is damaged	Some place is getting scratched	Always put iron in an upright position

ELECTROMAX

Specifications

Voltage	220-240V
Power	1000-1200W

Diagram

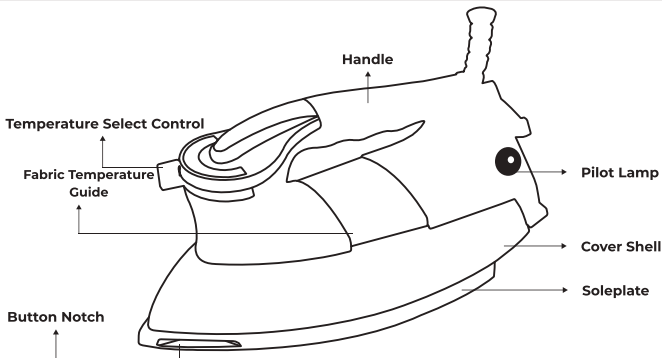

Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.