



**ELECTROMAX**



European Design & Technology By Electromax International UK



[www.electromax.pk](http://www.electromax.pk)



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

# ELECTROMAX

3 IN 1 BLENDER GRINDER CHOPPER



**USER MANUAL**



Better Appliances, Better Home

# ELECTROMAX

## General Safety Guidelines

- ⊙ Read the user manual before operating any appliance or equipment.
- ⊙ To avoid the risk of electric shock, do not immerse the equipment in water or use it in damp conditions.
- ⊙ While plugging or unplugging a power cord, hold it by the plug; never pull it by the cord.
- ⊙ Do not operate any equipment with a damaged power cord.
- ⊙ Check the voltage available at your home and ensure that it matches the voltage mentioned on your appliance before switching it on.
- ⊙ Do not attempt to repair the unit in case of any malfunction; always take it to an authorized service center.
- ⊙ Always keep the unit on a dry and flat surface.
- ⊙ Do not use any attachments other than the ones supplied by or specified by the manufacturer.
- ⊙ Always unplug the unit from the power source during lightning and thunderstorms or when the unit is not used for a long period of time.
- ⊙ Never leave the unit unattended while in operation, especially when children are around.
- ⊙ All the equipment is for household use only; do not use it for commercial purposes.
- ⊙ All appliances and equipment are designed for indoor use; do not use them outdoors unless specifically mentioned in the instruction manual.
- ⊙ Do not connect the equipment to an extension cord or multiple socket adapter; always connect the unit to the main socket to prevent short circuits and sparking, which can shorten the life of the unit.
- ⊙ Do not let the power cord hang over the edge of the table or work surface, as a sharp edge can damage the cable over time. Do not let it get tangled or come into contact with a hot surface.
- ⊙ The units can be cleaned with a damp cloth and immediately wiped dry; do not use detergents or chemical cleaning agents to clean the unit.
- ⊙ Never touch any appliance or equipment with wet or damp hands.
- ⊙ If the power cord is damaged, please replace it by the service center or the person designated by the manufacturer or a qualified person to avoid electric shock.
- ⊙ Children should be supervised to ensure that they do not play with the appliance.

# ELECTROMAX

## Precautions

- ⊙ Before using this appliance, make sure voltage and frequency indicated on the bottom surface are as per your local supply.
- ⊙ To protect against risk of electrical shock do not put motor housing, supply cord or plug in water or other liquids.
- ⊙ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- ⊙ Unplug this product from wall outlet when not in use, before putting on or taking off parts, and before cleaning.
- ⊙ Do not operate this appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- ⊙ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- ⊙ Do not put your fingers or utensils such as spoons into feeder opening or blender container during operation. If food becomes lodged in feeder opening, use food pusher or another piece of fruit or vegetable to push it down.
- ⊙ Always operate blender with cover unit in place.
- ⊙ Never place container base on motor housing without container attached.
- ⊙ Cutting blades are sharp. Handle carefully when emptying the container and during cleaning.
- ⊙ Do not assemble when there is food residue left around the base of spinner or in containers.
- ⊙ Do not place hot ingredients (over 60°C) in blender container.
- ⊙ Do not use appliance for any purpose other than its intended use.
- ⊙ Do not use the juicer if the spinner is damaged.
- ⊙ Discontinue using the appliance immediately and unplug when abnormal or malfunction occur.


## Specifications

<b>Voltage</b>	220-240V
<b>Power</b>	350W

# ELECTROMAX

## Diagram

- A1. Measuring cup
- A2. Cover
- A3. Blander container
- A4. Blender cutting base
- A5. Gasket
- A6. Blender container base
- C12. Mill container
- C13. Mill cutting base
- C14. Gasket
- C15. Mill container base
- D16. Motor housing
- D17. Switch panel
- D18. Motor housing bottom

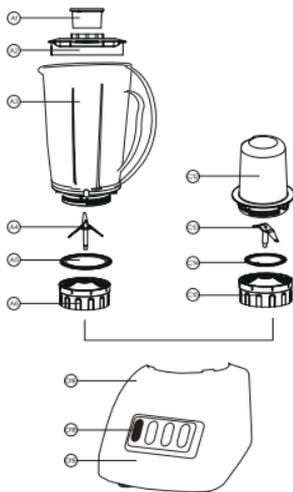

## Safety instruction

- 1 Before connecting to the mains, make sure that-the blender is completely mounted:
  - the speed selector(D17) is on "0".
  - the voltage specified at the bottom side corresponds to the mains voltage.
- 2 Never put the blender to work without the jug mounted.
- 3 When the motor is running
  - do not place nor remove the jar.
  - do not insert objects into the jar.
  - do not put your hand into the jar.
  - Always remove the plug from the socket after use.
- 4 Do not immerse the appliance cord or plug in liquid
- 5 The power core must be kept out of the reach of children and must not be placed near or come into contact with the hot parts of the appliance, sources of heat or sharp corners.
- 6 For your safety, only use accessories and spare parts that correspond to your appliance, sold by an approved after-sales service centre

# ELECTROMAX

## Using your appliance

### ⊙ Tips For Using for The First Time:

Before using your appliance for the first time, clean all the accessories (A), (B),(C) in warm water.

**[CAUTION:** The cutters are extremely sharp; handle them with caution when using or cleaning the appliance and when emptying the jar.]

Make sure all the packaging has been removed before operating the appliance.

### **Important note:**

Make the speed selector (D18) to "0" before placing the blender jar or accessories on the motor unit.

The appliance starts only if the jar or accessory is correctly locked on its body.

Do not operate the blender if the lid (A2) is not in place.

### ⊙ How To Use Blender

Place ingredients into blender container. Ensure the lid is locked properly the jar. Place container on motor housing. Twist jar clockwise to lock until it clicks.

Support motor housing while jar is being locked.

When jar does not fit into motor housing, twist it either way until it is set in place. Plug in. Switch( D18) to start.

When blending is completed, switch to off. Unplug and open the jar counterclockwise to remove from motor housing. Remove the ingredients. (Be sure to grip plug when unplugging. Never pull on the cord.)

### ⊙ Mill

Turn dry mill (C) clockwise to lock, counter clockwise to unlock.

Turn the mill container (C12) upside down, and place ingredients in container.

Turn container base onto the mill container and lock.

Place jar and jar base on motor housing. Turn container clockwise to lock until it clicks. Support motor housing while jar is being locked.

Plug in. Support jar then switch (D18) to start.

When blending is completed, to switch off. Support jar until operation finishes completely.)

Unplug. Turn the jar counterclockwise to remove. Be sure to grip plug when unplugging. Never pull the cord.)

Turn the jar upside down and tap with hand to release ingredients stuck in cutter.

# ELECTROMAX

## HINTS AND TIPS

For optimum performance when processing spices we recommend that you do not process more than 40g at a time in the mill.

Whole spices retain their flavour for a much longer time than ground spices so it is best to grind a small quantity fresh at a time to retain the flavour.

To release the maximum flavour and essential oils whole spices are best roasted prior to milling Baby food/purees-allow cooked food to cool to room temperature before processing in the mill.

## Recipe

### Blender:

1. 2 parts of soft fruit and 3 parts of water (soft fruit only, such as carrot, apple, etc.)
2. Do not exceed max. level mark
3. Operate with highest speed setting for 1 min

### Grinder:

1. Put 50g coffee bean into the grinding cup.
2. Operate with highest speed setting for 30 seconds.

## WHAT TO DO IF YOUR APPLIANCE DOES NOT WORK

PROBLEMS	CAUSES	SOLUTIONS
Product does not work	The plug is not connected	Connect the appliance to a socket with the same voltage
	The blender jug or assembled accessory is not correctly positioned or locked on the motor unit.	Check that the jug or accessories are correctly positioned and locked on the motor unit
Excessive vibrations	The production is not placed on a flat surface	Place the product on a flat surface
	Volume of ingredients is too high	Reduce the quantity of ingredients processed
Leak from the base of the accessories	Volume of ingredients is too high	Reduce the quantity of ingredients processed
	The lid is not correctly positioned	Lock the lid correctly on the blender jug
The cutter does not turn easily	Pieces of food too large or too hard	Reduce the size or quantity of ingredients processed Add liquid if appropriate

# ELECTROMAX

## How to clean

1. Operate with 1/2 of lukewarm water right after being used. Then wash inside with a soft sponge.
2. To remove ingredients stuck in the blade, carefully clean it with a brush. Then, dry.
3. Blades should be handled carefully.
4. Wipe motor housing with a damp cloth.
5. Wash each part in cold water or lukewarm water with a soft sponge.
6. Rinse and dry thoroughly.

## Recycling

- ⊙ Disposal of the appliance and its packaging materials.  
The packaging is comprised exclusively of materials that present no danger for the environment and which may therefore be disposed of in accordance with the recycling measures in force in your area. For disposing of the appliance itself, please contact the appropriate service of your local authority.
- ⊙ End of life electrical and electronic products. Your appliance is expected to last for many years. However, when the time comes to replace it, do not throw it in the bin or in a dump, but take it to the recycling centre in your town
- ⊙ Think of the environment!  
Your appliance contains valuable materials which can be recovered or recycled. Leave it at a local civic waste collection point.