

# ELECTROMAX

2 IN 1 BLENDER GRINDER



**USER MANUAL**



Better Appliances, Better Home



**ELECTROMAX**



European Design & Technology By Electromax International UK



[www.electromax.pk](http://www.electromax.pk)



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

# ELECTROMAX

## Before Using the Appliances

To ensure optimal performance and safety, please follow these steps before using your Electromax blender and grinder for the first time:

- ⊙ Check for any damage or missing components. Contact customer support if necessary.
- ⊙ Carefully remove all parts from the packaging.
- ⊙ Wash the blender jar, grinder jar, lids, and any removable parts in warm soapy water.
- ⊙ Familiarize yourself with the safety precautions, controls, and operation before use.

## Safety Measures

- ⊙ **Read Instructions:** Always read the entire user manual before operating the appliance.
- ⊙ **For Household Use Only:** Not intended for commercial or outdoor use.
- ⊙ **Supervision Required:** Close supervision is necessary when used by or near children.
- ⊙ **Power Supply:** Use only with a properly grounded 220–240V AC outlet.
- ⊙ **Do Not Immerse:** Never immerse the motor base, plug, or cord in water or any other liquid.
- ⊙ **Unplug After Use:** Always unplug from the outlet when not in use, before assembling/disassembling, or cleaning.
- ⊙ **Do Not Use if Damaged:** Do not use the appliance if the cord, plug, or base is damaged. Contact Electromax service center.
- ⊙ **Lid On During Use:** Always operate with the lid securely in place.  
**Avoid Overfilling:** Do not exceed the maximum fill line to prevent spills or motor strain.
- ⊙ **Use Pulse Button:** Operate in short bursts using the Pulse button for best results and to avoid overheating.
- ⊙ **Never Insert Utensils:** Keep hands and utensils away from the blades during operation to avoid injury.


# ELECTROMAX

## Before Plugging in

- ⊙ Ensure all parts (motor base, jars, lids, blades) are correctly assembled and undamaged.
- ⊙ Do not plug in if any part appears cracked, damaged, or improperly fitted.
- ⊙ Set the motor base on a level, heat-resistant, and non-slip surface.
- ⊙ Make sure your hands, the power cord, and all surfaces are completely dry to avoid the risk of electric shock.

## Diagram

- A1. Measuring cup
- A2. Cover
- A3. Blander container
- A4. Blender cutting base
- A5. Gasket
- A6. Blender container base
- C12. Mill container
- C13. Mill cutting base
- C14. Gasket
- C15. Mill container base
- D16. Motor housing
- D17. Switch panel
- D18. Motor housing bottom

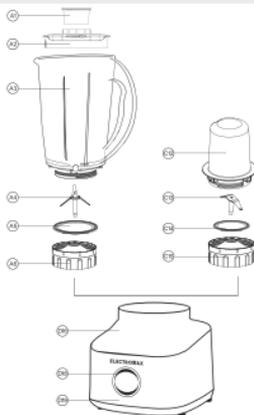

## How to use the Product

01. Assemble the blender jar onto the motor base. Make sure it locks into place.
02. Add ingredients into the jar. Do not exceed the maximum fill line.
03. Secure the lid tightly to avoid spills.
04. Plug in the unit to a power outlet.
05. Attach the grinder jar to the motor base securely.
06. Add dry ingredients into the grinder jar (do not overfill).
07. Close the lid tightly.
08. Plug in the appliance.
09. Press and hold the Pulse button to grind. Use short bursts for better control.
10. Unplug the appliance before removing the grinder jar.

# ELECTROMAX

## Product Components

01. Motor Base Unit
02. Blender Jar with Lid and Handle
03. Grinder Jar
04. Pulse Button Control

## Specifications

Voltage	220-240V
Power	350W

## Troubleshooting

If your Electromax blender or grinder is not functioning properly, try the following solutions before seeking service. If the appliance does not start, ensure it is properly plugged into a working outlet and that all parts are correctly assembled. If the motor stops during use, it may be due to overheating—unplug the unit and allow it to cool for at least 15 minutes before retrying. Leaks from the jar may result from an improperly sealed lid or a worn gasket; check the seal and ensure the lid is fitted securely. If ingredients are not blending or grinding evenly, avoid overfilling and try pulsing in short bursts to redistribute contents. For persistent issues, refer to the warranty or contact Electromax customer support.

PROBLEMS	CAUSES	SOLUTIONS
Unit not starting	Not plugged in properly	Check power cord
Motor stops mid-use	Overheated	Let it cool for 15 min

# ELECTROMAX

## Cleaning and Maintenance

To ensure the longevity and optimal performance of your Electromax blender and grinder, clean the appliance after each use. Always unplug the unit before cleaning. Detach the blender and grinder jars, as well as their lids, and wash them in warm, soapy water. Rinse thoroughly and allow to air dry. Do not immerse the motor base in water; instead, wipe it down with a damp cloth and dry with a soft towel. Avoid using abrasive sponges or harsh chemicals, as these can damage the surface. Periodically check the blades and sealing rings for wear and replace them if necessary. Store the appliance in a cool, dry place when not in use.

## Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.