



ELECTRO **MAX**



European Design and Technology By ElectroMax International



info@electromax.pk



www.electromax.pk



[electromax-international](https://www.linkedin.com/company/electromax-international)

ELECTROMAX

FOOD FACTORY



USER MANUAL



Better Appliances, Better Home

ELECTROMAX

Before using the appliances

Before you use your ElectroMax Food Factory, follow these important steps to ensure safety, hygiene, and proper functioning of the appliance.

- ⊙ Wipe the motor base with a dry cloth (never use water on the motor).
- ⊙ Inspect all parts to make sure they are not damaged or cracked.
- ⊙ Attach the correct jar or accessory depending on the function (blender, juicer, chopper, etc.).
- ⊙ Follow the user manual diagram for correct placement of blades and lids.

Safety measures

- ⊙ Always plug the machine into a dry and grounded socket to avoid short circuits or electric shock.
- ⊙ Blades are very sharp. Always use the food pusher to add ingredients — never use hands or metal spoons.
- ⊙ Before turning on the appliance, make sure the jar, lid, and blades are securely locked in place. The machine won't work safely otherwise.
- ⊙ Fill jars only up to the recommended level. Overloading can damage the motor and reduce performance.
- ⊙ Always switch off and unplug the appliance before cleaning or changing parts to avoid accidental startup.
- ⊙ The appliance should be used by adults only. Children should not be allowed near the machine while it is running.
- ⊙ Wash all jars, blades, and lids after every use to maintain hygiene and prevent bacterial growth.
- ⊙ Before switching on, ensure all jars, lids, and blades are fitted and locked according to the manual. A loose attachment can leak, jam, or damage the motor.
- ⊙ Place the machine on a flat, sturdy surface to avoid tipping. Always supervise around children—store the appliance and sharp attachments out of their reach.

ELECTROMAX

Before plugging in

- ⊙ Make sure to review the instruction manual to understand the features, assembly instructions, and safety precautions specific to your model.
- ⊙ Ensure that all components (blades, bowls, lids, discs, etc.) are in place and properly assembled before use.
- ⊙ Make sure the food processor's power switch is turned off before plugging it in.

Diagram

01. High Level Button

02. Power Cord

03. Host

04. Cup Cover

05. 99.99% Chopper

06. Chopping Cup

07. Coaster



How to use the Product

01. Assemble the bowl, blade, and lid of the food processor.
02. Cut ingredients into smaller pieces for easier processing.
03. Select the appropriate blade or disc based on your task.
04. Plug in the food processor and secure the lid properly.
05. Turn on the food processor, using pulse or continuous mode as needed.
06. Process the ingredients until you achieve the desired consistency.
07. Turn off the processor, unplug it, and clean all parts thoroughly.

ELECTROMAX

Boil-dry protection

To protect your food processor and ensure its longevity, always follow the manufacturer's instructions and avoid overloading the bowl. Keep the blades sharp and use the processor only for recommended tasks to prevent damage. Place the unit on a stable, flat surface and turn it off before unplugging.

Specifications

Voltage	220-240V
Power	1000W

Troubleshooting

If your food processor isn't working properly, there are a few common issues to check before seeking a replacement. First, ensure it's securely plugged into a working outlet, as many problems stem from a loose connection or tripped breaker.

PROBLEMS	CAUSES	SOLUTIONS
The machine does not operate after power on	The top cover is locked in place or not	Put in the top cover good
The machine stop	Voltage is too low	Check power supply

ELECTROMAX

Cleaning and maintenance

Proper cleaning and maintenance of your food processor can help keep it working efficiently and extend its lifespan. After each use, unplug the appliance and disassemble all removable parts, such as the bowl, lid, blades, and discs. Wash these parts in warm, soapy water or place them on the top rack of the dishwasher if they're dishwasher-safe—always check the manual. Use a brush to clean around the blade edges carefully to avoid injury, and never submerge the motor base in water; instead, wipe it down with a damp cloth. To remove stubborn stains or food residue, soak parts in a mixture of baking soda and water or use a small amount of white vinegar. Make sure all parts are completely dry before reassembling or storing the processor. Periodically check for wear and tear on blades, seals, and locking mechanisms, and replace any damaged components as needed. Storing your food processor in a clean, dry place and keeping the blade covered or in a blade-safe storage container can help maintain safety and performance over time.

Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.