

ELECTROMAX

3 IN 1 FOOD PROCESSOR



USER MANUAL



Better Appliances, Better Home



ELECTRO **MAX**



European Design & Technology By Electromax International UK



www.electromax.pk



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

ELECTROMAX

Before Using the Appliances

Before operating your Electromax Food Processor for the first time, please follow these steps to ensure safe and optimal performance

- ⦿ Remove all packaging materials and protective films from the appliance and its components. Ensure all parts listed in the package contents are present.
- ⦿ Follow the assembly instructions to fit the desired attachment securely onto the motor base. Make sure all lids and components are properly aligned and locked in place.
- ⦿ Position the appliance on a flat, clean, and dry surface with sufficient ventilation. Keep it away from the edge of counters and out of reach of children

Safety Measures

- ⦿ Read all instructions carefully before using the appliance.
- ⦿ Unplug the unit when not in use, before assembling/disassembling parts, and before cleaning.
- ⦿ Avoid contact with moving parts. Keep hands, utensils, and other objects away from the blades during operation to prevent injury or damage.
- ⦿ Do not operate the appliance if the cord, plug, or any part is damaged. Contact customer support for repairs.
- ⦿ Keep the appliance away from water or any other liquids to prevent electric shock. Do not immerse the motor unit in water.
- ⦿ Use only recommended attachments to avoid risk of fire, electric shock, or injury.
- ⦿ Ensure all parts are properly locked in place before operating the appliance.
- ⦿ Do not run the motor continuously for more than 3 minutes. Allow it to cool before restarting.
- ⦿ Place the unit on a flat, stable surface during use to avoid tipping over.
- ⦿ Keep out of reach of children. This appliance is not intended for use by persons with reduced physical or mental capabilities without supervision.


ELECTROMAX

Before Plugging in

- ⊙ Before plugging in, ensure all parts are properly assembled and the voltage matches your local supply.
- ⊙ Ensure the appliance is unplugged before assembling or cleaning.
- ⊙ Do not operate with a damaged cord or plug.
- ⊙ Keep hands and utensils away from moving blades.

Diagram

- | | |
|-----------------------------|-----------------------|
| 01. Filter Basket | 08. Feed tube and Lid |
| 02. JuiceCollector | 09. Pusher |
| 03. Blender Stiring | 10. Blender Jug |
| 04. Blender Cover | |
| 05. Mill Cutting Blade Base | |
| 06. Locking Arm | |
| 07. Motor Unit | |

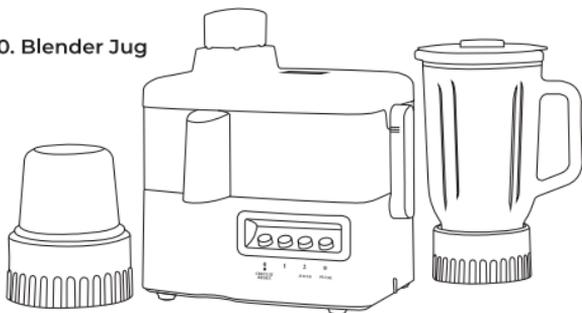

How to use the Product

01. Place the appliance on a flat, stable surface.
02. Choose the desired jar (juicer, blender, or grinder) and attach it securely to the base.
03. Add ingredients into the selected jar.
04. Secure the lid tightly before operation.
05. Plug in the appliance.
06. Turn the control knob to the appropriate speed or function:
 - "1" – Low speed
 - "2" – Juicer
 - "Pulse" – For short bursts
07. After use, turn the knob to "0" and unplug the unit.
08. Disassemble and clean the parts thoroughly.

ELECTROMAX

Preparing Your Food Processor

01. Carefully remove the food processor and all accessories from the packaging.
02. Inspect all parts for any visible damage. Do not use the appliance if any part is cracked or broken.
03. Wash the blender jar, grinder jar, citrus juicer, and lids in warm soapy water. Rinse and dry thoroughly.
04. Place the motor base on a flat, stable surface.

Specifications

Voltage	220-240V
Power	600W

Troubleshooting

If your Electromax Juicer Blender Grinder is not functioning as expected, refer to the following common issues and solutions. Ensure the appliance is unplugged before inspecting or handling any components. If the unit fails to start, check that it is securely plugged into a working power outlet and that all parts are correctly assembled and locked into place. Excessive vibration or noise during operation may indicate an improperly seated jar or blade; reassemble carefully to ensure a snug fit. In cases of reduced juicing or blending efficiency, avoid overloading the jars and cut ingredients into smaller, manageable pieces.

PROBLEMS	CAUSES	SOLUTIONS
Appliance won't start	Not properly plugged in	Check power connection
Poor juicing	Overloaded or hard produce	Cut into smaller pieces

ELECTROMAX

Cleaning and Maintenance

The Electromax 3-in-1 Food Processor is designed for easy cleaning and maintenance to ensure long-lasting performance. After each use, unplug the appliance and disassemble all detachable parts. The juicer components, including the pulp container, juice collector, and lid, should be rinsed promptly under running water to prevent residue buildup. Use a soft brush to clean the juicer filter thoroughly, ensuring the mesh remains unclogged. The blender and grinder jars can be washed with warm soapy water, and for more efficient cleaning, fill them with water and a drop of dish soap, then run on the “Pulse” setting for a few seconds. Always handle the blades with care. Wipe the main motor unit with a damp cloth—never immerse it in water. Regular cleaning after each use helps maintain hygiene and the appliance's performance.

Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.