

# **ELECTROMAX**

We Deliver Innovation

**Electric Kettle**

## **USER MANUAL**



 [www.electromax.pk](http://www.electromax.pk)



**ELECTROMAX**



European Design & Technology By Electromax International UK



 +92 (370) 044 0589

## Before using the appliances

Read the instructions properly before using the unit. The blades are sharp so handle with great care,

1. Remove all packaging including protective foam/cellophane and labels.
2. Dispose the packaging properly and keep it out of reach of children.
3. Ensure that all parts are complete as shown/mentioned in this manual.
4. Clean the kettle by boiling the water at full capacity twice then discarding it.

Wipe the surface with a damp cloth.

## Safety measures

- ⊙ Use the kettle only for its intended domestic purpose.
- ⊙ This Appliance is intended to be used in household and similar applications such as:-staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments. Bed and breakfast type environments
- ⊙ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- ⊙ Children should be supervised to ensure that they do not play with the appliance.
- ⊙ Cord replacement Instructions: If supply cord is damaged, it should be replaced by the service agent, manufacturer or similarly qualified
- ⊙ The kettle MUST always be turned off before plugging or unplugging from power outlet for cleaning, servicing or moving purposes.
- ⊙ Never yank the cord to disconnect from power outlet; you must hold the plug and pull to disconnect.
- ⊙ Do not let cord touch any hot surface. Keep the cord well-kept to avoid injury.
- ⊙ The base frame must not be wet.
- ⊙ Do not operate the kettle without water.
- ⊙ This electric water kettle can be only used with the attached base frame. Do not use the base frame for other purposes.
- ⊙ Do not immerse the base, power cord and kettle into water to avoid damage.
- ⊙ Do not hold the kettle from any other part except from the handle. And if the kettle is hot, use a mitten or cloth to hold the handle.
- ⊙ Avoid having contact with the steam from the spout.
- ⊙ Be very careful when moving the kettle while it is hot to avoid any Injury.


# ELECTROMAX

We Deliver Innovation

## Before plugging in

- ⊙ Check that no parts are damaged. If one is, call or return the unit to the manufacturer or reseller.
- ⊙ Make sure electricity supply is same with the required voltage of the appliance.
- ⊙ Do not use the product if power cord is damaged. it must be

## Diagram

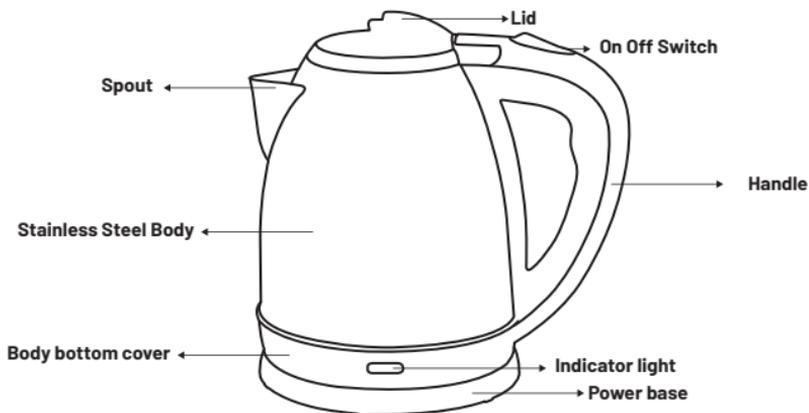

## How to use the kettle

1. Fill the kettle by removing it from the power base. Open the lid by pulling backwards and lifting the lid handle. Fill with the desired amount of water and then close the lid,
2. Make sure the water does not exceed MAX level or be below MIN level.
3. Place again the kettle onto the power base.
4. Connect the plug into a power outlet. Turn on the switch by pressing it, the indicator light will turn on.
5. Boiling of water will start and once it does boil, the kettle will switch off automatically,
6. You have the option to turn off the switch during the boiling of water. If you wish to boil the water again, turn on the switch directly to restart kettle.
7. Lit the kettle from the power base and then pour the water out.
8. Always disconnect power cord from outlet if kettle is not in use.

# ELECTROMAX

We Deliver Innovation

## Boil-dry protection

If in case you operated the kettle with no water, the boll-dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water and before boiling again.

## Specifications

<b>Voltage</b>	220-240V
<b>Power</b>	1850~2000W

## Troubleshooting

Please refer to the table below for common queries on this unit as it may save you time and money. If your concern is not found on the list or your issue persists, then kindly call our service centre.

PROBLEMS	CAUSES	SOLUTIONS
The kettle and the indicator light do not work when the poser lever is pressed down	Power plug is not inserted properly attached to the base unit	The power cord should be plugged properly to the outlet
	Kettle was not properly attached to the base unit	The kettle must be properly attached to the base unit
The water has boiled but the switch won't turn off	The lid is not closed properly	Always check that the lid is locked properly
The power switch cannot be turned down	The kettle is not attached properly to the base	Ensure there is nothing that is blocking the kettle from locking with the power base

# ELECTROMAX

We Deliver Innovation

## Cleaning and maintenance

1. Disconnect the appliance from the power outlet before cleaning.
  2. Never immerse the kettle, power cord or power base in water. Never allow even moisture to come in contact with these parts.
  3. Wipe the outside part with a damp cloth. Never use steel wool or alike as they cause gloss loss.
  4. The kettle must be descaled periodically as the mineral deposits from tap water may form on the bottom part of the kettle which causes less efficiency.
- ⊙ You can use a commercial product for descaling or you can use white vinegar solution as an alternative.
  - ⊙ Fill the kettle with three cups of white vinegar then add water to reach the MAX level of the kettle. Leave this solution inside the Kettle overnight.
  - ⊙ The next day, pour the solution and fill it with clean water, boil it and pour it out again. Repeat the process until the smell of vinegar is gone. If there is any stain especially in the spout area, remove it by wiping it with a damp cloth.

## Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation.
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.