



**ELECTRO**  **MAX**



European Design & Technology By Electromax International UK



[www.electromax.pk](http://www.electromax.pk)



[electromax.international](https://www.instagram.com/electromax.international)



+92 (370) 044 0589

# ELECTROMAX

SANDWICH MAKER



**USER MANUAL**



Better Appliances, Better Home

# ELECTROMAX

## Before Using the Appliances

Before using your Electromax Multismart Mini Panineuse (or any sandwich maker) for the first time, here are some important steps to take:

- ⦿ Familiarize yourself with the specific instructions and safety guidelines for your electromax Multismart Mini Panineuse.
- ⦿ Position the sandwich maker on a stable, level, and heat-resistant surface, away from edges.
- ⦿ Wipe the outside of the appliance with a damp cloth to remove any dust or packaging residue.

## Safety Measures

- ⦿ Never leave the sandwich maker unattended while it's in use.
- ⦿ Ensure children and pets cannot touch the hot surfaces or pull on the cord.
- ⦿ Place the sandwich maker on a flat, stable, and heat-resistant surface to prevent it from tipping over.
- ⦿ Always the first and most important step. It contains specific safety instructions for your appliance.
- ⦿ Don't overfill the sandwich maker with food, as this can prevent it from closing properly and may cause hazards.
- ⦿ The exterior surfaces and cooking plates become very hot during use. Use the handle to open and close the appliance.
- ⦿ Always unplug the sandwich maker and allow it to cool down completely before cleaning.
- ⦿ Do not immerse the appliance, cord, or plug in water or any other liquid to avoid electric shock.
- ⦿ Ensure the power cord does not come into contact with hot surfaces.
- ⦿ This appliance is typically designed for indoor use only.
- ⦿ Always unplug the sandwich maker from the power outlet when it's not being used and before cleaning.
- ⦿ Regularly inspect the appliance, cord, and plug for any signs of damage. If damaged, do not use it.


# ELECTROMAX

## Before Plugging in

- ⊙ Look for any breaks in the outer insulation. Even small cuts can expose the internal wires.
- ⊙ Ensure the sandwich maker is placed on a stable, heat-resistant surface away from curtains, paper, or other flammable materials.
- ⊙ Check if the cord is worn or frayed, especially near the plug and where it enters the appliance.

## Diagram

- 01. Non-stick Heating Plates
- 02. Auto Cut Off
- 03. Handles
- 04. Latch
- 05. Red Power Light
- 06. Amber Ready Light
- 07. Hotplate
- 08. Bottom Cover
- 09. Detachable Plate

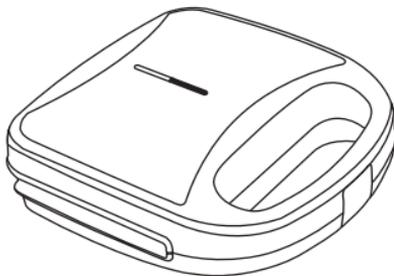

## How to use the Product

- 01. Ensure the sandwich maker is on a flat surface and connected to a power source.
- 02. Wait for the light to signal that it's reached the ideal temperature.
- 03. Use a little butter or oil for crispier sandwiches and easier cleanup.
- 04. Place your filled bread slices onto the bottom plate.
- 05. Press gently until the latch clicks into place.
- 06. Check for golden brown results; timing may vary by filling thickness.
- 07. Carefully open the lid and use a silicone or wooden spatula.
- 08. Wipe the plates with a damp cloth after the device has cooled.

# ELECTROMAX

## Preparing Your Sandwich

01. Place your desired fillings between two slices of bread. For a golden crust, butter the outside of the bread slices.
02. Open the preheated sandwich maker and place the sandwich on the bottom plate.
03. Gently press down the lid to ensure even cooking. Do not force it shut.
04. Toast the sandwich for approximately 3-5 minutes, depending on your preference and the type of bread and fillings used.

## Specifications

Voltage	220-240V
Power	1200W

## Troubleshooting

When troubleshooting your sandwich maker, start by checking the most basic things. Is it properly plugged into a working power outlet? Are the indicator lights behaving as expected according to the user manual? If the appliance isn't heating, ensure the lid is closed properly, as some models have safety mechanisms that prevent heating when open. For food sticking, make sure you're using a little butter or oil on the bread (if recommended) and that the non-stick surface is clean and undamaged.

PROBLEMS	CAUSES	SOLUTIONS
Food not browning	Not preheated	Wait for green light
Sandwich sticking	No oil/butter used	Lightly grease plates

# ELECTROMAX

## Cleaning and maintenance

Always unplug the sandwich maker and allow it to cool completely before cleaning. To clean the non-stick plates, use a soft, damp cloth or sponge to gently wipe away crumbs and food residue. Avoid using abrasive cleaners, scouring pads, or metal utensils, as they can damage the non-stick coating. If food is stuck, apply a small amount of mild dish soap to a damp cloth and gently clean the surface. Do not immerse the appliance, cord, or plug in water or any other liquids. Wipe the exterior with a dry or slightly damp cloth. After cleaning, ensure all parts are dry before storing. For models with upright storage, close the lid and secure the latch to save space.

## Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.