



**ELECTRO** **MAX**



European Design and Technology By ElectroMax International



[info@electromax.pk](mailto:info@electromax.pk)



[www.electromax.pk](http://www.electromax.pk)



[electromax-international](https://www.linkedin.com/company/electromax-international)

# ELECTROMAX

VACUUM CLEANER



**USER MANUAL**



Better Appliances, Better Home

# ELECTROMAX

## Before Using the Appliances

To ensure effective performance and safe operation, please check the following before using the vacuum cleaner:

- ⊙ Ensure the filter is clean and dry. Dirty or wet filters reduce suction efficiency.
- ⊙ Remove any stuck objects or blockages that may obstruct cleaning.
- ⊙ Make sure there are no cuts or damage to the cord. Faulty cords can cause electric shock or malfunction.
- ⊙ Ensure a safe environment by keeping children and pets at a distance while operating the vacuum.

## Safety Measures

- ⊙ Always unplug the vacuum cleaner before cleaning or maintenance.
- ⊙ Do not use the vacuum near water or wet surfaces.
- ⊙ Avoid vacuuming sharp objects like nails, glass, or coins.
- ⊙ Keep hair, loose clothing, fingers, and body parts away from openings and moving parts.
- ⊙ Do not use a damaged cord or plug.
- ⊙ Store the vacuum cleaner in a dry place away from children's reach.
- ⊙ Do not operate the vacuum if it is malfunctioning or making unusual noises.
- ⊙ Avoid running the vacuum continuously for extended periods to prevent overheating.
- ⊙ Use only recommended attachments and accessories.
- ⊙ Do not pull the vacuum by the cord or yank the cord to unplug.
- ⊙ Turn off the vacuum cleaner before plugging in or unplugging from the power socket.
- ⊙ Do not vacuum flammable or combustible materials like gasoline or hot ashes.
- ⊙ Do not block the air vents; keep them free from dust and debris.
- ⊙ Clean or replace filters regularly to maintain optimal performance.
- ⊙ Do not use the vacuum cleaner outdoors unless it's specifically designed for outdoor use.

# ELECTROMAX

## Before Plugging in

- ⊙ Check that all parts of the vacuum cleaner are securely attached, including the hose, attachments, and dust container.
- ⊙ Make sure the power cord is free from cuts, frays, or any signs of wear and tear. A damaged cord can pose a safety hazard.
- ⊙ Ensure the vacuum cleaner's filter is clean and properly placed to avoid reduced suction and air flow.

## Diagram

- |                   |                        |
|-------------------|------------------------|
| 01. Handle        | 08. Tube               |
| 02. On/Off Button | 09. Floor Brush        |
| 03. Power Cord    | 10. Small Round Nozzle |
| 04. Clamp         | 11. Crevice Nozzle     |
| 05. Small Wheel   | 12. Hose Socket        |
| 06. Bobby         | 13. Speed Control Knob |
| 07. Hose          | 14. Wooden Floor Brush |



## How to use the Product

01. Plug the vacuum cleaner into a power outlet.
02. Turn on the power switch.
03. Adjust the height or suction setting for the floor type.
04. Attach the right tool (floor head, crevice tool, etc.).
05. Start vacuuming from one corner of the room.
06. Move the vacuum slowly back and forth.
07. Cover all areas, including under furniture if possible.
08. Use attachments for edges, sofas, or curtains.
09. Empty the dustbin or replace the bag when full.
10. Turn off, unplug, and store the vacuum properly.

# ELECTROMAX

## Disposal

When the vacuum cleaner reaches the end of its service life, it should be disposed of properly according to local regulations for electronic waste. Do not dispose of it with regular household waste.

## Specifications

Voltage	220-240V
Power	1800W

## Troubleshooting

Experiencing issues with your Electromax vacuum cleaner? Don't worry, many common problems have simple solutions. If your vacuum isn't powering on, double-check that it's securely plugged into a working power outlet. A loss of suction power often indicates a full dust container that needs emptying or clogged filters requiring cleaning or replacement. Similarly, obstructions in the hose or attachments can significantly reduce suction, so be sure to inspect and clear these pathways.

PROBLEMS	CAUSES	SOLUTIONS
Unusual noise	Blockage in the hose or attachments.	Check and remove any blockages.
Low suction power	Dust container is full.	Empty the dust container or replace the dust bag.

# ELECTROMAX

## Cleaning and maintenance

To keep your Electromax vacuum cleaner performing at its best and to prolong its lifespan, regular cleaning and maintenance are essential. The filters are crucial for maintaining suction power; depending on the type (e.g., HEPA, foam), they should be cleaned regularly by gently washing and allowing them to air dry completely, or replaced as recommended. Don't forget to periodically inspect the flexible hose and all attachments for any blockages, removing any accumulated debris. The dust container, whether bagless or with a disposable bag, needs regular attention; empty bagless containers frequently and replace disposable bags when full to ensure optimal performance. The exterior of the vacuum cleaner can be wiped down with a soft, damp cloth to keep it clean. When not in use, store our vacuum cleaner in a cool, dry place with the power cord neatly wound to prevent damage. Consistent cleaning and maintenance will help your vacuum cleaner operate efficiently for years to come.

## Warranty

ElectroMax appliances come with two-year local warranty. ElectroMax will repair or replace the unit for free provided:

1. It is under the warranty period.
2. The appliance has not been misused, neglected or damaged.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. No unauthorized materials/parts are used on the appliance.
5. The warranty does not extend to faults arising due to incorrect installation
6. The warranty does not cover normal wear and tear of the product.
7. Original invoice or warranty card with stamp must be presented.